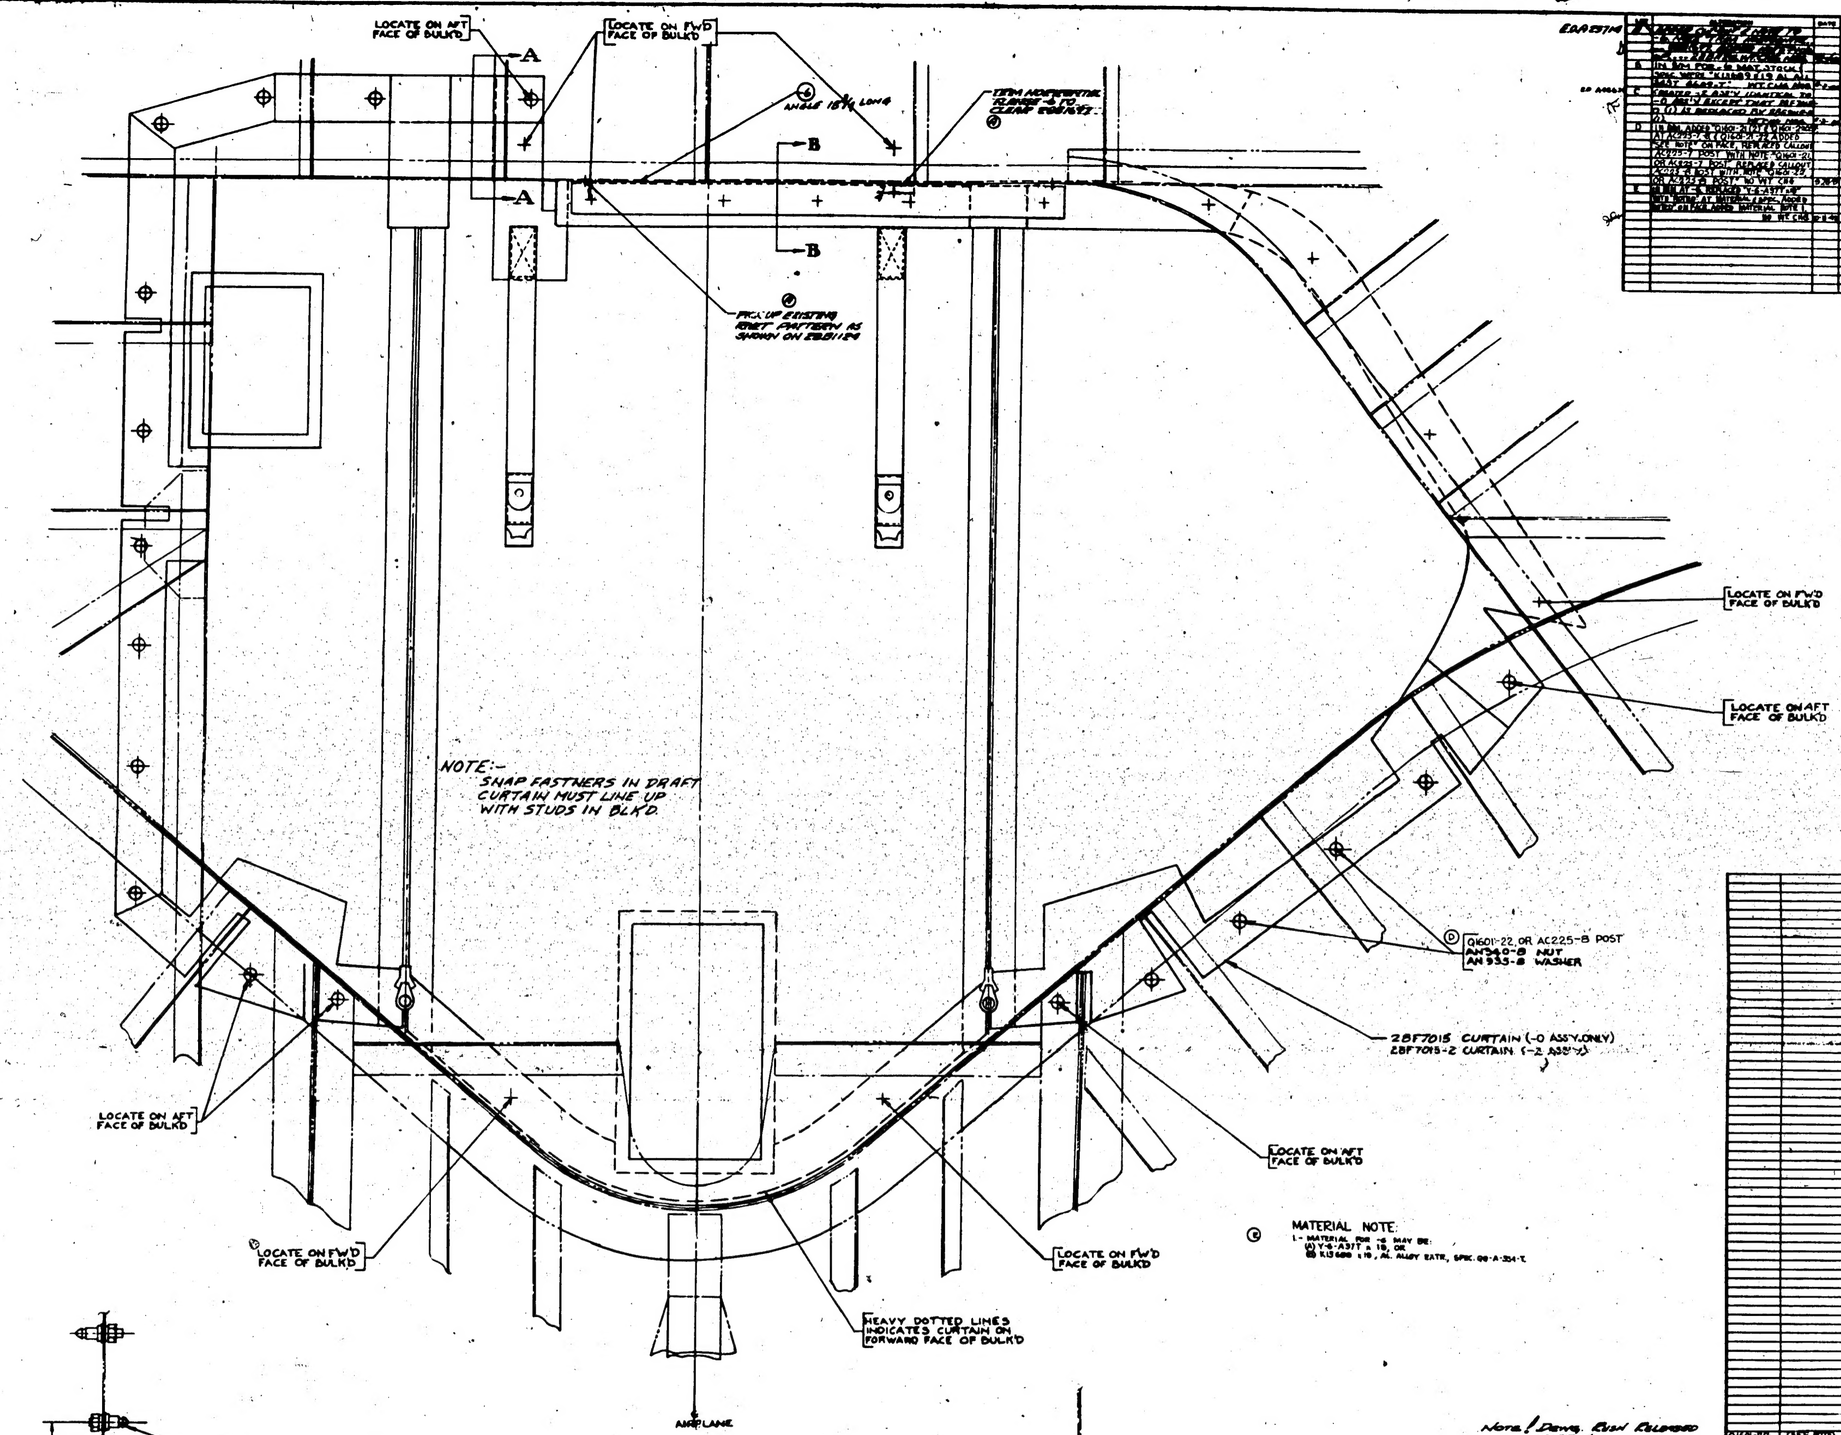
LOCATE ON AFT FACE OF BULK'D
LOCATE ON FW'D FACE OF BULK'D
ANGLE 1 3/4 x 1 3/4 x 1/4
TRIM HORIZONTAL FLANGE A TO CLEAR CURTAIN
PICK UP EXISTING RIVET PATTERN AS SHOWN ON 28B1124
A
B
LOCATE ON FW'D FACE OF BULK'D
LOCATE ON AFT FACE OF BULK'D
Q1601-22, OR AC225-8 POST
AN340-8 NUT
AN935-8 WASHER
28F7015 CURTAIN (-0 ASS'Y ONLY)
28F7015-2 CURTAIN (-2 ASS'Y)
LOCATE ON AFT FACE OF BULK'D
LOCATE ON AFT FACE OF BULK'D
LOCATE ON FW'D FACE OF BULK'D
LOCATE ON FW'D FACE OF BULK'D
HEAVY DOTTED LINES INDICATES CURTAIN ON FORWARD FACE OF BULK'D
AIRPLANE
NOTE:-
SNAP FASTENERS IN DRAFT CURTAIN MUST LINE UP WITH STUDS IN BLK'D.
MATERIAL NOTE:
1 - MATERIAL FOR -6 MAY BE:
(A) V-6-A317 x 18, OR
(B) KLS 680 x 18, AL ALLOY EXTR, SPEC. 00-A-354-T.
Q1601-21, OR AC225-7 POST
AN340-8 NUT
AN935-8 WASHER
28B1100-15 (REF.)
FORWARD
SECTION A-A
SCALE 12"=1'-0"
VIEW LOOKING FW'D
STA. 1.0
AN442AD5 RIVET
(REF.)
FORWARD
SECTION B-B
SCALE 12"=1'-0"
NOTE:
SNAP FASTENERS IN DRAFT CURTAIN MUST LINE UP WITH STUDS IN BULK'D
STUDS ON AFT SIDE OF BULK'D
STUDS ON FW'D SIDE OF BULK'D
Note! Dwg. Just Released 10-27-41
Q1601-22 (SEE NOTE)
Q1601-21 (SEE NOTE)
AN935-8
AN340-8
AC225-8 (SEE NOTE)
AC225-7 (SEE NOTE)
NONE
NONE
INSTALL - FURN'S
DRAFT CURTAIN STA. 1
CONSOLIDATED AIRCRAFT CORP.
28F7016
H 409
28F7016